

GUIDE TV SAT - GOLDBLICK

In your apartment you will find a list containing some of the most important channels. It is incomplete because of the big number of channels. Minimum once per annum, a technician controls the parameters and seeks updates or new channels.

Working instructions - Television/DIGITAL Receiver Combo Vision

1. Turn on the TV

You turn on the TV manually directly on the TV-set. (Without remote control - no stand-by).

2. Channel standard television AV1 or AV2

The channel should always be on AV2. (If that is not the case, please choose it with the programme-button directly on the TV).

With the remote control "Vision" you start the receiver - button "ON".

The tele program goes on. After watching, please turn the apparatus off manually.

Working instructions D V D / C D

DVD/CD - Player Aiwa

1. Turn on the television (see upper description)

2. standard chain AV1 or AV2

3. Start the DVD-Player "Aiwa" and put the Disc in - Play.

4. After use please turn off the DVD/CD - player manually (not stand-by)

>> The volume can also be regulated manually on the TV-set.

Please do not try to change the parameters or the reception. If you have problems or questions do not hesitate to contact me by telephone: Renato Fux +41 79 239 73 34